

Data Sheet

Zonecheck Retro-Fit

ZC-RF-DS-01/23-03

OVERVIEW

Zonecheck Retro-fit is a remote flow-switch testing device that fits around an existing flow-switch. It works by using a closed loop system that re-circulates water to simulate sprinkler head operation and tests the flow-switch without discharging water. When the pump is activated via the local key-switch, water is circulated across the flow-switch at a flow equivalent to one sprinkler head in operation (required by code standards). The Key-switch is used to activate the Zonecheck test and indicate flow-switch activation as well as the local valve-status.




IMPORTANT

Included with Zonecheck Retrofit is an additional mechanical tee with vent valve. The fitting of this additional vent is recommended to ensure reliable operation of the Zonecheck as large quantities of trapped air may affect the performance of the pump. The vent can be installed at any convenient location but is recommended to be installed on the top of the pipe within 500mm (either) side of the flow-switch. Note: for vertical installation, the vent is not required.



Specifications

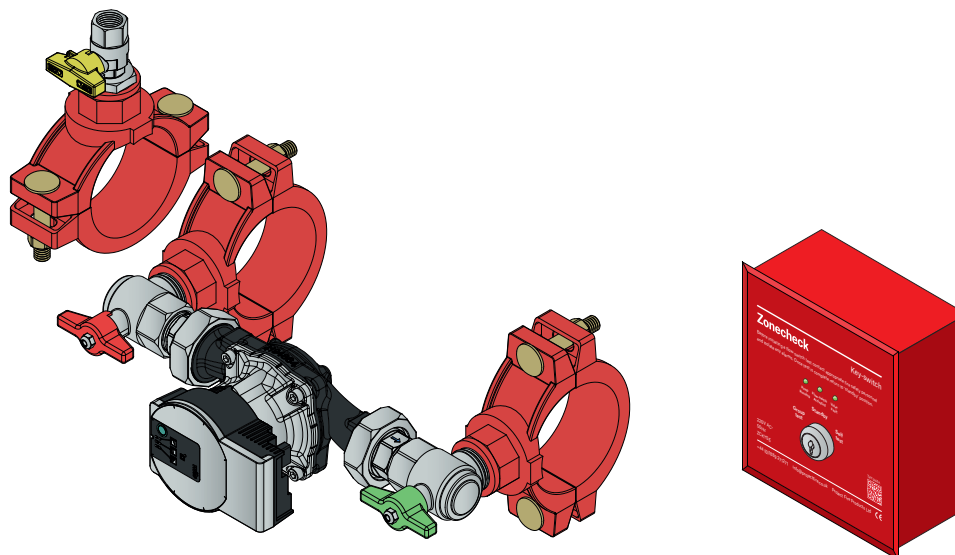


ZONECHECK	
Working pressure rating	Water, 12 bar (175 psi) max
Operating temp range	0°C - 49°C (32°F – 120°F)
Mech tee diameter	50/65/80/100/150/200mm (2-8")
Approvals	LPCB, UL, FM and VdS
IP Rating	IPX4D
PUMP	
Type	Wilo Para
Operating voltage	230v 50Hz
Amps	0.82A
Max power rating	75W
IP Rating	IPX4D

[illegible]

Dimensions

ØMM	A	B (MIN)	B (MAX)	D
50 (2")	130	45	64	210
65 (2½")	150	55	75	220
80 (3")	162	56	81	220
100 (4")	195	72	100	235
150 (6")	260	100	130	275

*Please leave a minimum of 160mm above the face flow-switch and pump head for access and maintenance.

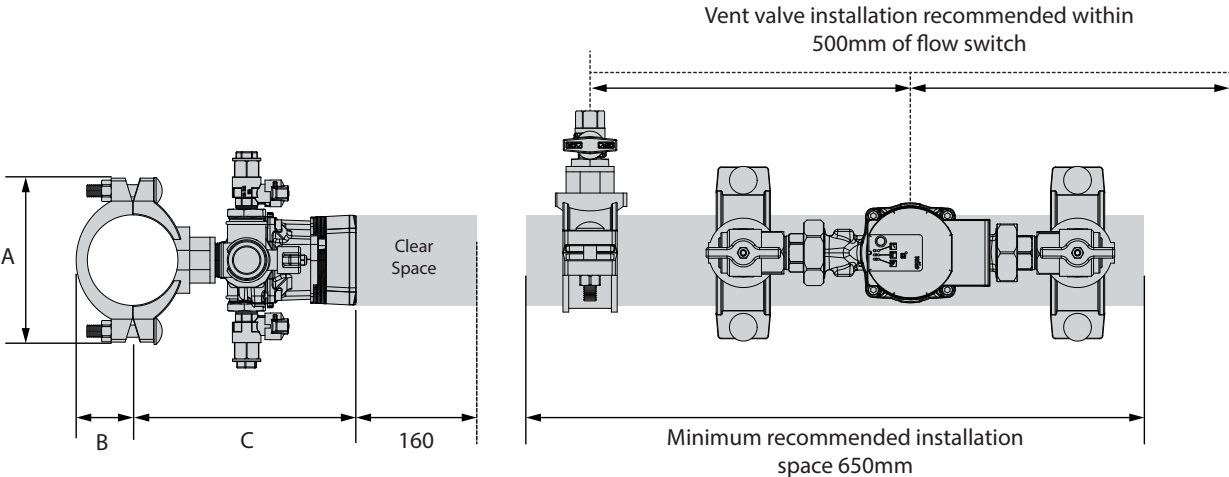


Orientation

Zonecheck can be installed both horizontally and vertically. Please check the directional arrows on the pump casting before installing. Pump flow should be opposite to the sprinkler systems flow.

When installing horizontally the flow-switch must face upwards and can not be installed facing sideways or below the pipe.

Left hand and right hand models are designed for when Zonecheck is installed along walls and space is limited.

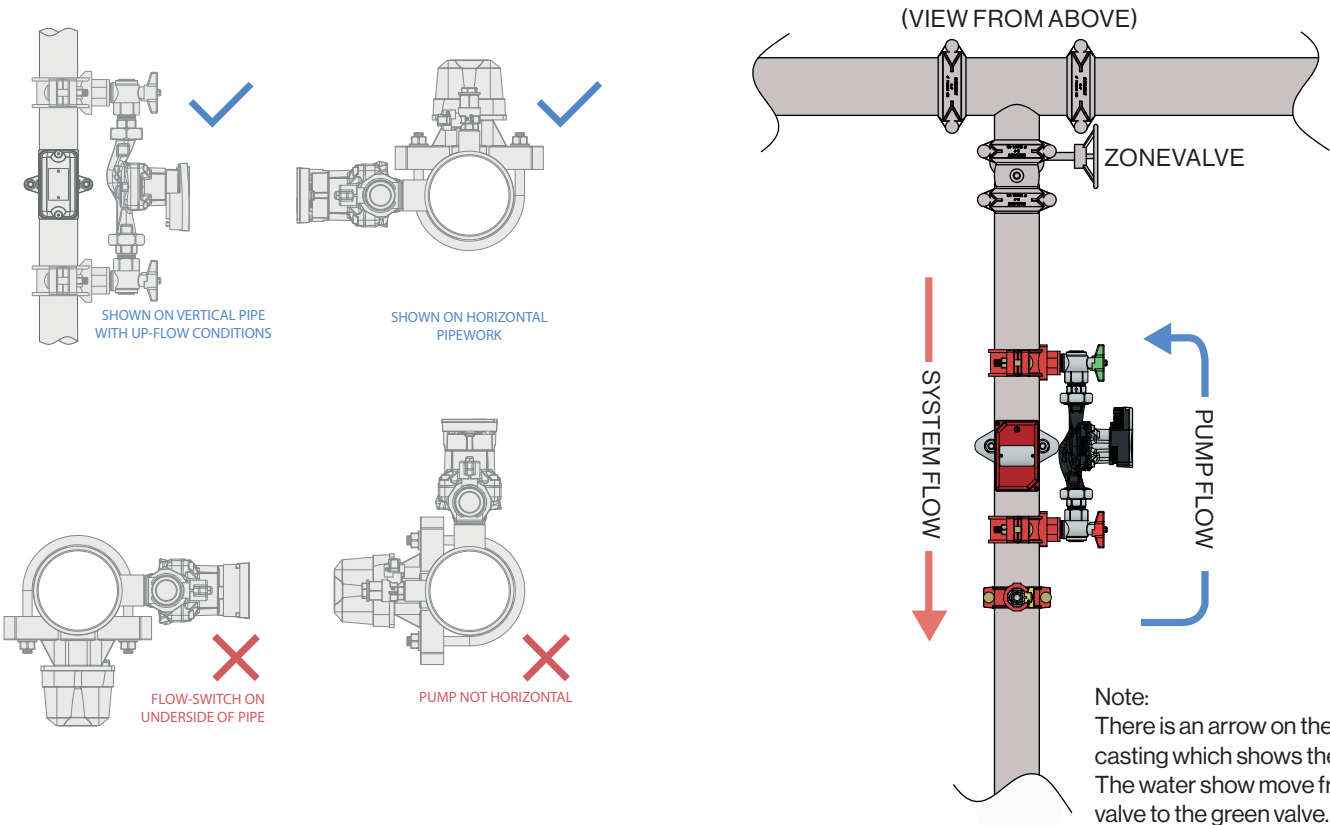


Wiring

Typical fire-alarm/flow-switch connections. Exact wiring required depends on type of fire panel used. Refer to specific fire-alarm panel instructions for more information/guidance.

Resistors sized according to specific alarm-panel requirements.

*(y) end of line resistor.

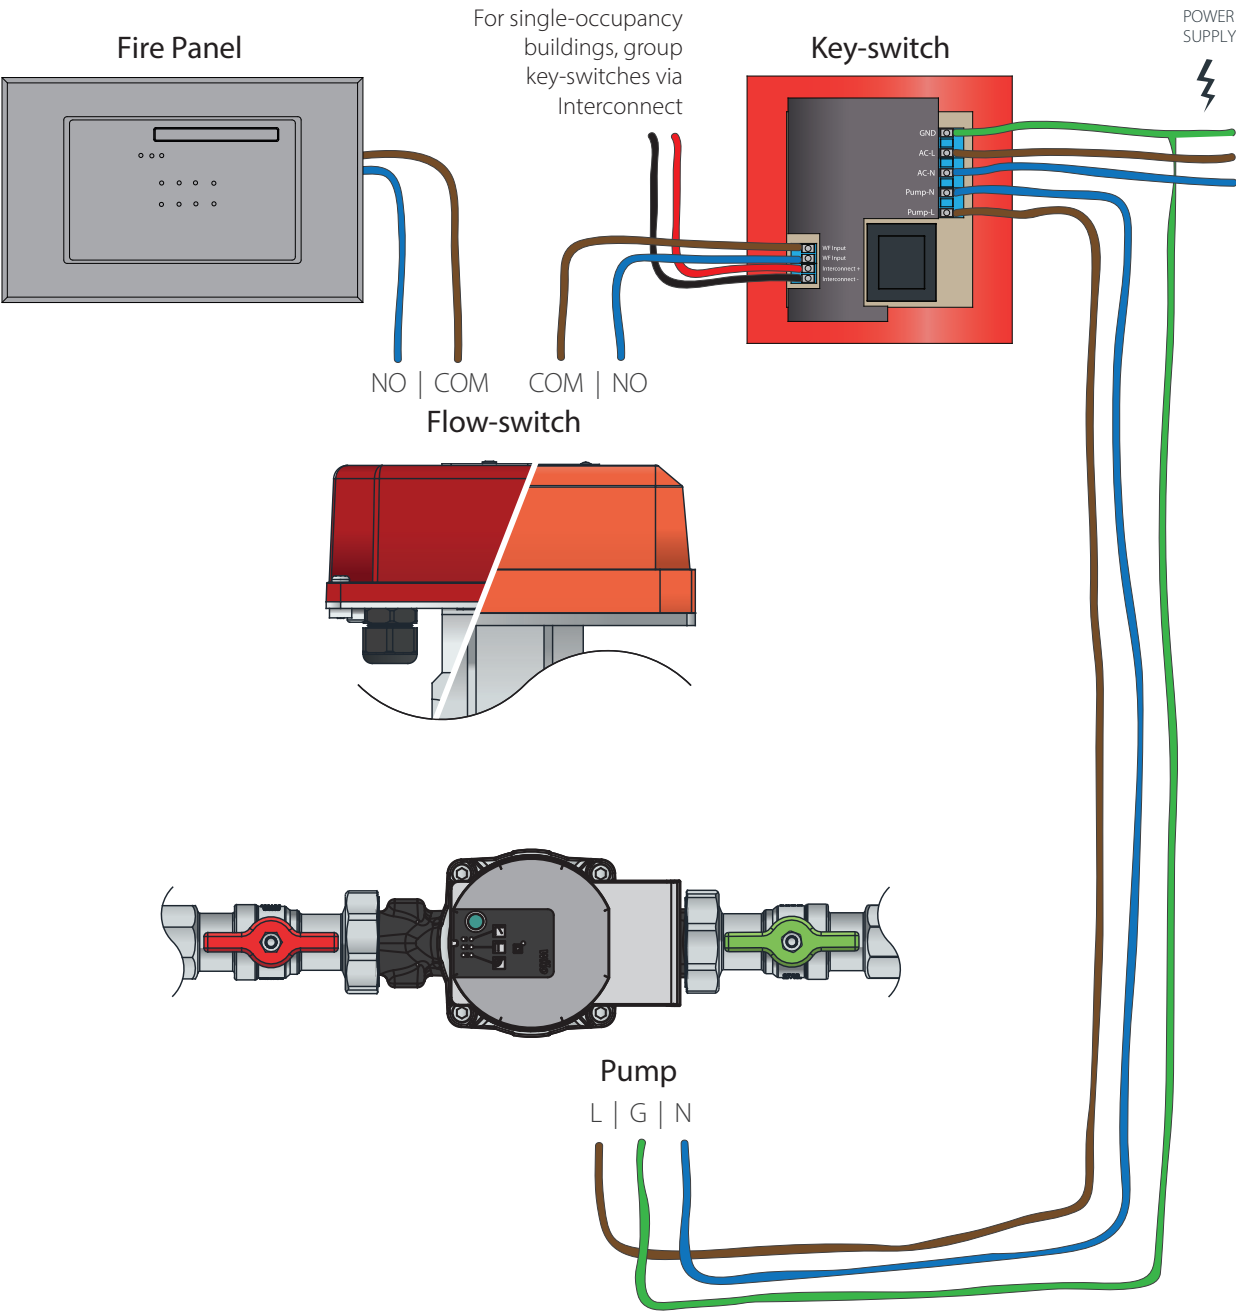

100% water saving

Remote testing

No water discharge

Approved

Simplified testing method

Code compliant

Sustainable testing

LPCB

VdS

FM

UL

Efficient

Designed and manufactured in the UK by Project Fire Products Ltd.

+44(0)1889 271271
info@projectfire.co.uk
www.projectfire.co.uk

Zonecheck® is a registered trademark.
© Project Fire Products Ltd. 2023.